OLIGHT

USER MANUAL

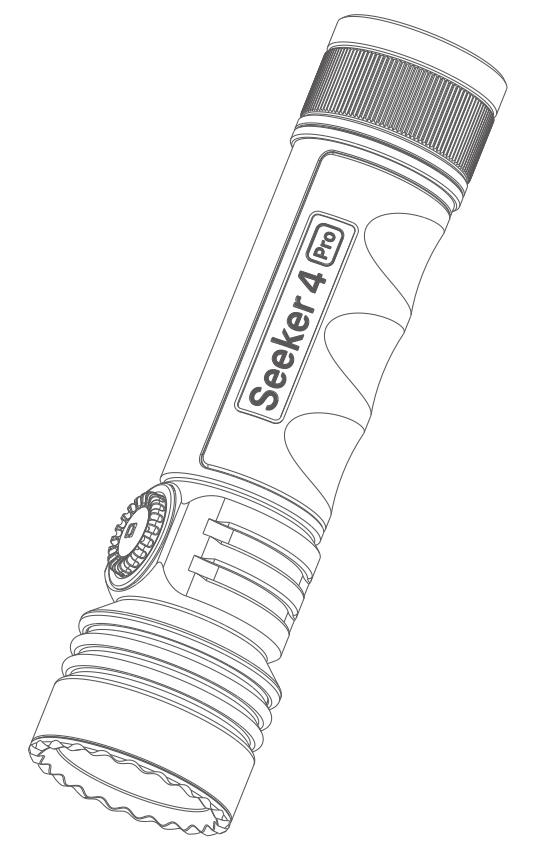

Seeker 4 Pro

A powerful flashlight with a multifunctional holster.

IN THE BOX

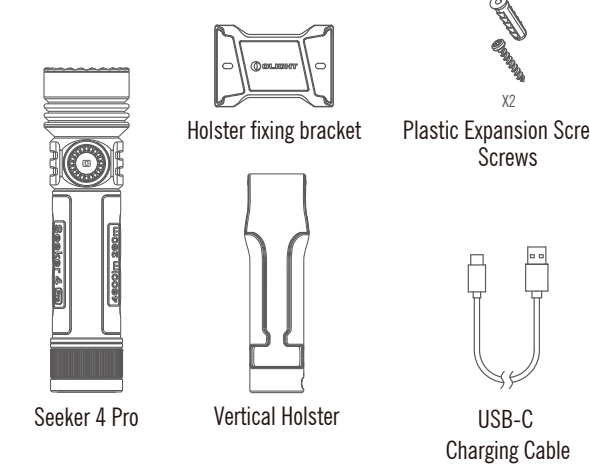

Table 1:
SPECIFICATIONS

COOL WHITE CCT: 5700~7000K CRI:70
NEUTRAL WHITE CCT: 4000~5000K CRI:70

Mode	Output	Runtime
TURBO	4,600 lumens	100% 2.5min → 26% 122min → 13% 35min
HIGH	1,200 lumens	100% 135min → 50% 35min → 25% 10min
MEDIUM	300 lumens	100% 11h
LOW	50 lumens	100% 60h
MOONLIGHT	5 lumens	100% 15days

16,895cd | 260m | 1.5m

IPX8 | (L)133*(D)35mm (L)5.24*(D)1.38in | 205g/7.23oz (Including Battery)

Rechargeable Li-ion Battery 5000mAh 3.6V (18Wh) | Working temperature: 0-40°C

** Above data are tested per ANSI/NEMA FL 1-2009 standard in Olight's labs for reference.*

Table 2:
USB-C Charging Cable

Charge Type	USB-C
Cable length	0.8m
Input	5V/2A
Time to fully charge	About 3.5 hours

MCC (Optional Accessory)

Cable length	0.5m
Input	5V/2A
Output	CC&CV 4.2V±0.05V 2.0A
Time to fully charge	About 4.5 hours

Note: The MCC is not included in the package. If necessary, please purchase it from Olight Store.

Figure 1
Remove the insulating film

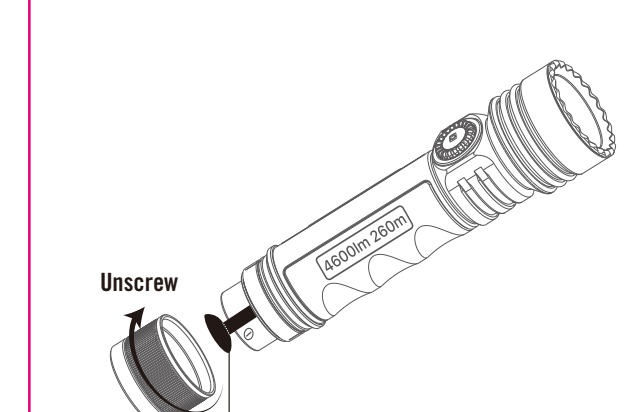

Figure 2
Charging

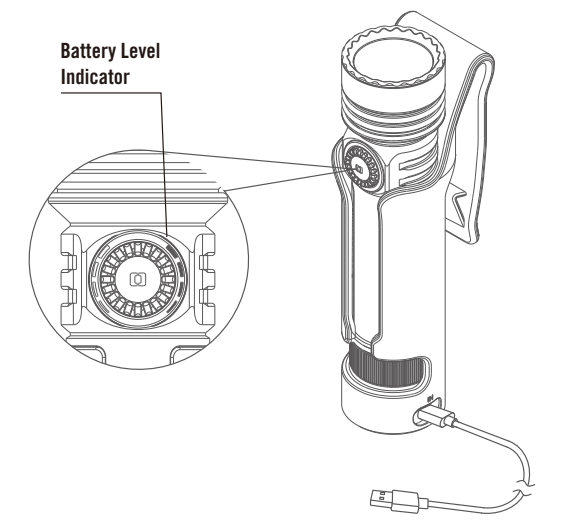

Figure 3
Lockout

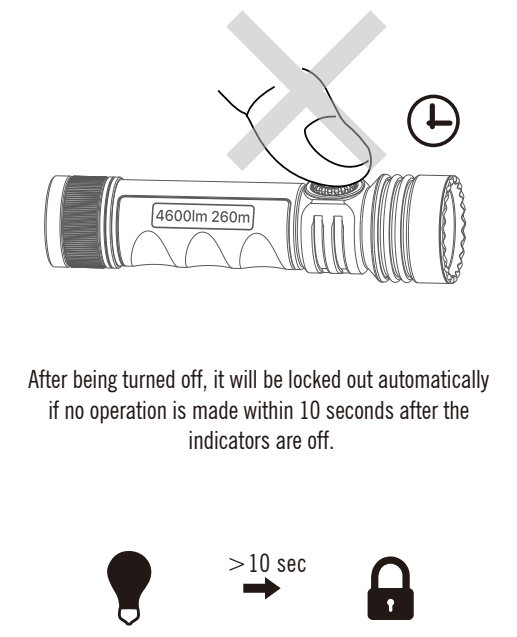

After being turned off, it will be locked out automatically if no operation is made within 10 seconds after the indicators are off.

Figure 4
Unlock

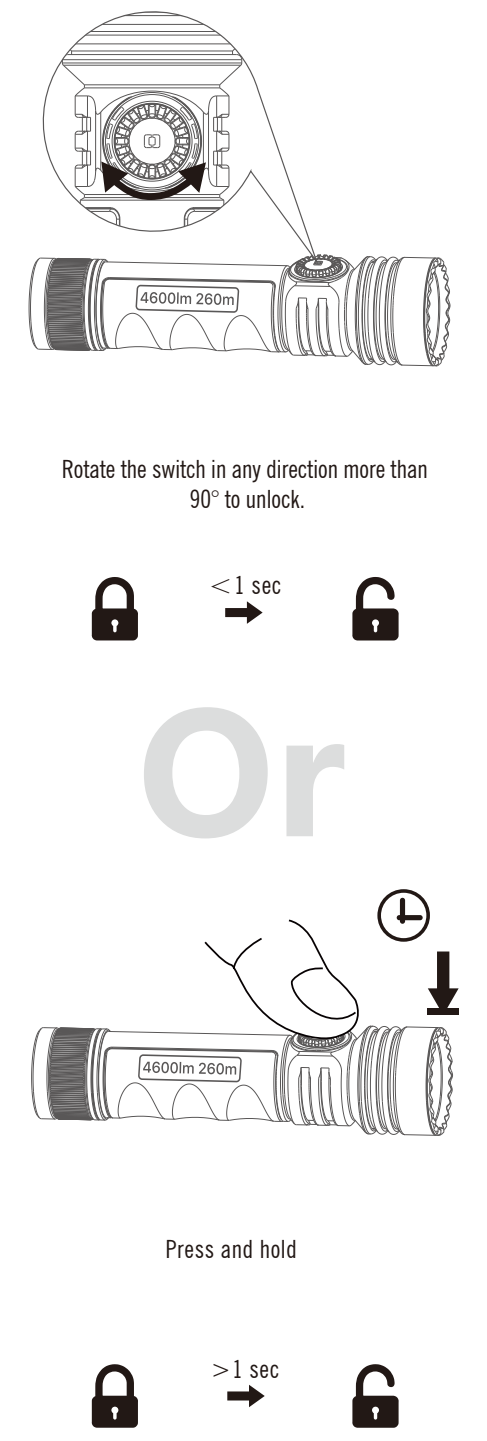

Rotate the switch in any direction more than 90° to unlock.

Press and hold

Figure 5
On/Off

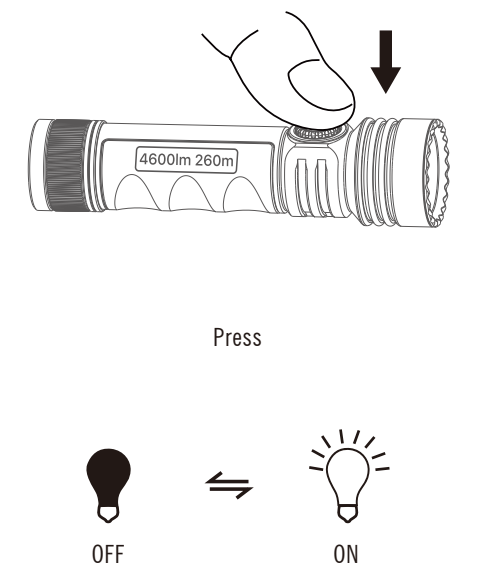

Figure 6
Moonlight

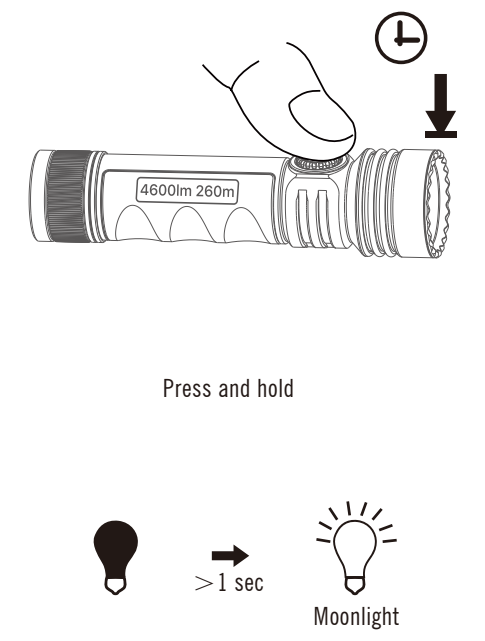

Figure 7
Turbo

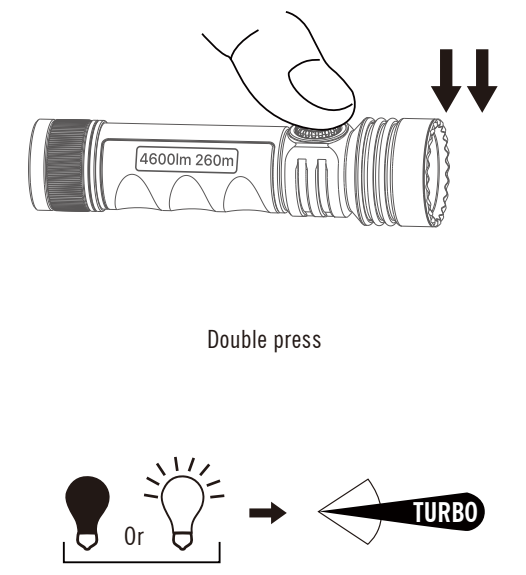

Figure 8
Strobe

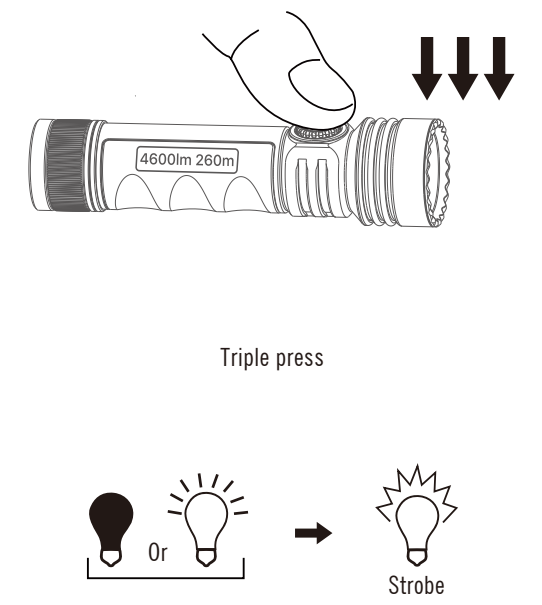

Figure 9
Change brightness level

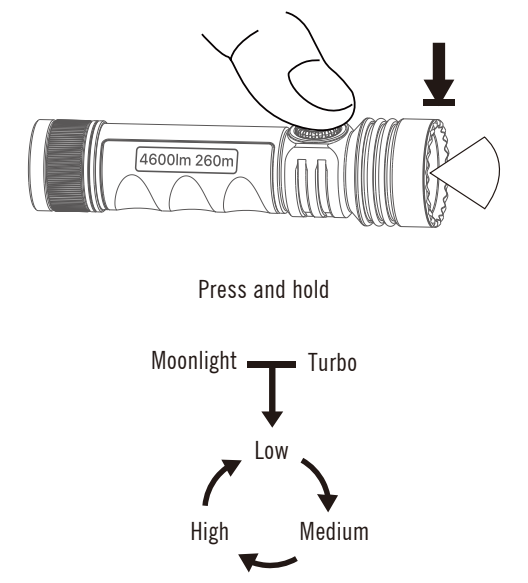

Figure 10-1
While off: Stepless increasing and decreasing

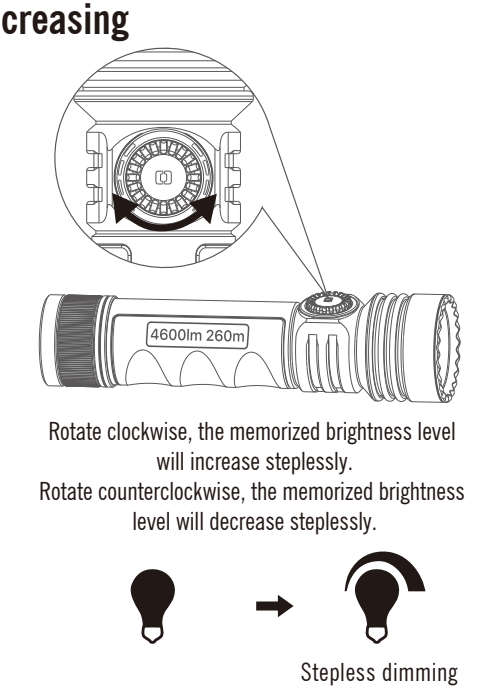

Rotate clockwise, the memorized brightness level will increase steplessly. Rotate counterclockwise, the memorized brightness level will decrease steplessly.

Figure 10-2
While on: Stepless increasing and decreasing

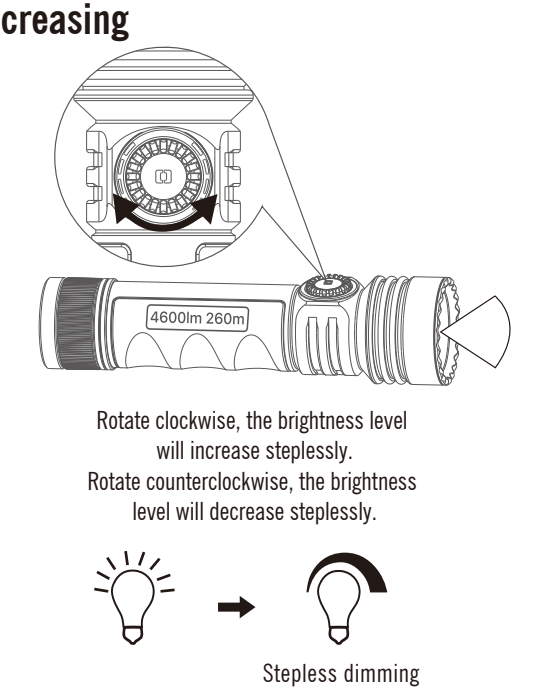

Rotate clockwise, the brightness level will increase steplessly. Rotate counterclockwise, the brightness level will decrease steplessly.

Figure 11
Timer

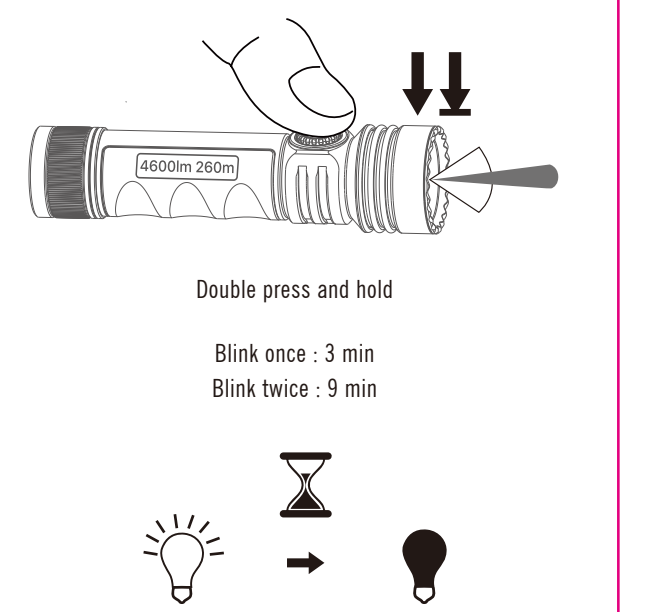

Figure 12
How to use the holster

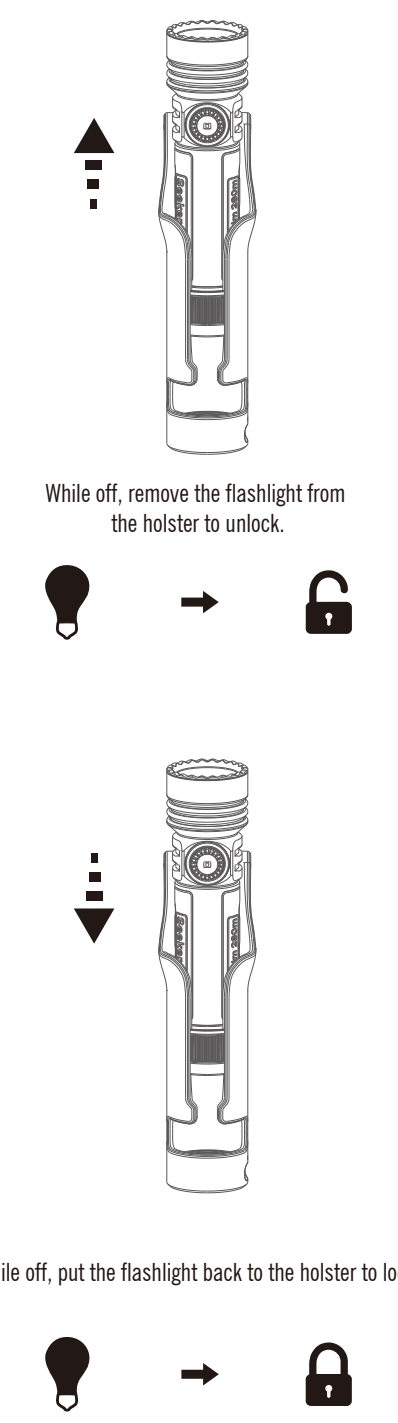

While off, remove the flashlight from the holster to unlock.

While off, put the flashlight back to the holster to lock.

Figure 13
How to use the fixing bracket

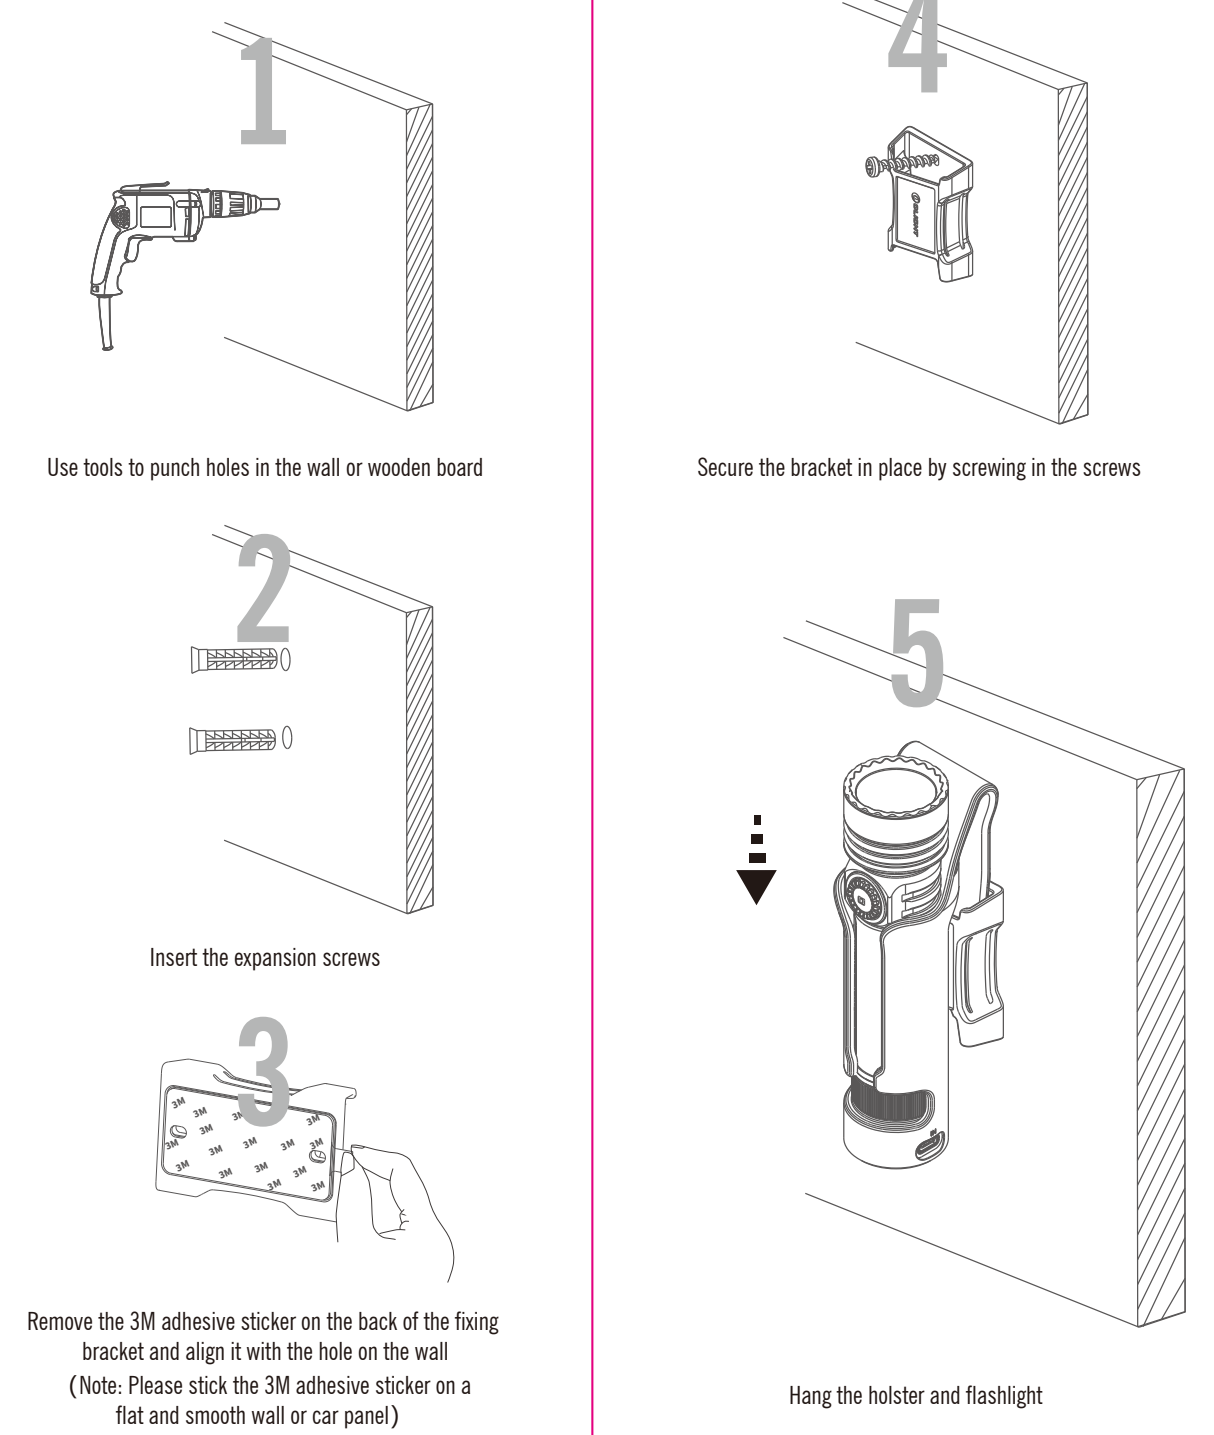

Use tools to punch holes in the wall or wooden board

Insert the expansion screws

Remove the 3M adhesive sticker on the back of the fixing bracket and align it with the hole on the wall (Note: Please stick the 3M adhesive sticker on a flat and smooth wall or car panel)

Secure the bracket in place by screwing in the screws

Hang the holster and flashlight

Figure 14
How to take the vertical holster out of the fixing bracket

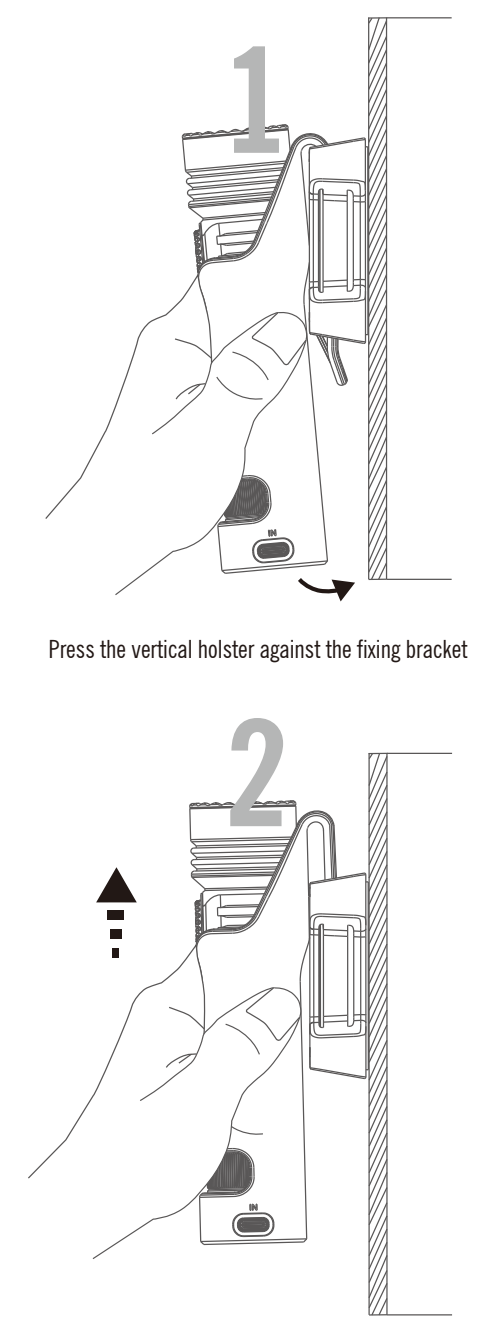

Press the vertical holster against the fixing bracket

Pull

Figure 15-1
Brightness level indicators

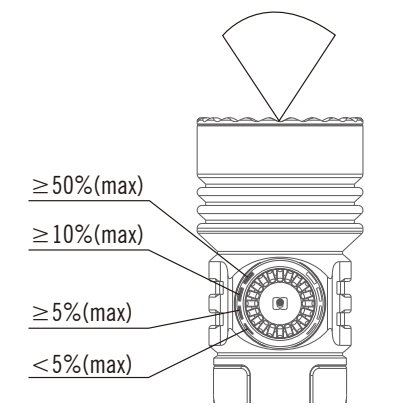

Figure 15-2
Battery Level indicators

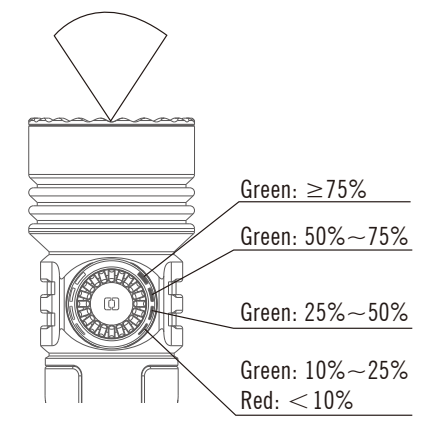

CONTENTS

(EN) English 01
(CN) 简体中文 02
(FI) Finnish 04
(NO) Norwegian 05
(SV) Swedish 07
(NL) Nederlands 09
(PL) Polska 11
(DE) Deutsch 13
(HU) Magyarország 15
(RU) Русский 17
(ES) Español 19
(RO) Romanesc 22
(UA) Ukrainian 23
(JP) 日本語 26
(KR) 한국어 28
(TH) ไทย. 30
(FR) Français 32
(IT) Italiano 34
(SK) Slovenskýjazyk 36
(PT) Português 38

(EN) English

Multi-language dictionary, see Table 3.

1. Product parameters, see Table 1 and Table 2.

2. Operating instructions as below:

2.1 Remove the insulating film before use, see Figure 1.

2.2 Charging, see Figure 2.

While charging, the battery level indicators on the dashboard will be dynamically illuminated. Once it is fully charged, all battery level indicators will be lit.

2.3 Lockout, see Figure 3.

After turned off, it will be locked out automatically if no operation is made within 10 seconds after the indicators are off. In lockout mode, pressing the side switch will display the remaining battery level.

2.4 Unlock, see Figure 4.

To unlock, rotate the switch more than 90° in any direction, or press and hold the button for about 1 second until the flashlight enters Moonlight mode. After it is unlocked, the brightness and battery level indicators will respectively display the memorized brightness level and remaining battery level.

3. While unlocked:

3.1 On/Off, see Figure 5.

Press the switch to turn it on/off. When the light is turned on, it will return to the memorized brightness level. (The High mode and above brightness will be memorized as High mode. The Medium mode and above brightness level will be automatically stored as the memorized mode after turned off, and after one minute it will be memorized as Medium mode. The brightness level lower than Medium mode will be automatically stored as the memorized mode after turned off.)

3.2 Moonlight, see Figure 6.

While off, press and hold the switch for 1s to enter Moonlight mode.

3.3 Turbo, see Figure 7.

Quickly double press the switch to enter Turbo mode, double press again to return to the memorized mode.

3.4 Strobe, see Figure 8.

Quickly press the switch three times or more to enter Strobe mode. Press or press and hold to exit the mode.

3.5 Change the brightness level, see Figure 9.

While on, press and hold the switch and it will automatically cycle through Low, Medium, High and Low mode. The mode is selected when the switch has been released. (Please note: Moonlight and Turbo are not in the automatic cycle.)

3.6 Stepless increasing and decreasing:

While off: Rotate the switch clockwise to ramp up the memorized brightness level to the highest(High mode) in permitted conditions. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its highest setting. rotate the switch counterclockwise to decrease the brightness level until it enters Moonlight mode. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its lowest setting. **See Figure 10-1.**

While on: Rotate the switch clockwise to ramp up the memorized brightness level to the highest(Turbo mode) in permitted conditions. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its highest setting. rotate the switch counterclockwise to decrease the brightness level until it enters Moonlight mode. The corresponding brightness level grid of the brightness controller will flash to notify when the brightness reaches its lowest setting. **See Figure 10-2.**

3.7 Timer, see Figure 11.

The Seeker 4 Pro has a long (9 minutes) and short (3 minutes) timer when the light needs to be automatically turned off. When the light is on, double press and hold the switch under the current brightness level to access the timer settings. A single blink accesses the short timer while two blinks accesses the long timer. The light will automatically turn off when the timer runs its course.

4. How to use the holster, see Figure 12.

One step unlocking: When removing the flashlight from the holster, the flashlight will be quickly unlocked automatically. The indicators on the dashboard will display the memorized brightness level and the remaining battery level and then turn off after 5 seconds. The flashlight can be turned on directly with a single press within 10 seconds after the dashboard indicators are off.

One step locking: When the flashlight is off, it will be locked if put back to the holster.

5. How to use the fixing bracket, see Figure 13:

Begin by using tools to punch holes in the wall or wooden board, then insert the expansion screws. Next, remove the 3M adhesive sticker on the back of the fixing bracket and align it with the hole on the wall. Finally, secure the bracket in place by screwing in the screws.(Note: Please stick the 3M adhesive sticker on a flat and smooth wall or car panel)

6. How to take the vertical holster out of the fixing bracket, see Figure 14.

Press the vertical holster against the fixing bracket, then pull it up and out of the fixing bracket.

7. Indicators dashboard:

7.1 Brightness level indicators, see Figure 15-1.

7.2 Battery Level indicators, see Figure 15-2.

(CN) 简体中文

多语言字典，参见 Table 3。

1. 产品参数参见 Table 1与Table 2。

2. 操作指引见下：

2.1 使用前移除绝缘片，参见Figure 1。

2.2 充电，参见Figure 2。

充电时仪表盘的电量格会动态显示，全部亮表示充满。

2.3 锁键，参见Figure 3。

关机待仪表盘指示灯熄灭后10s内无按键操作，自动锁键；锁键

a kapcsolót. Újabb kétszeri gyors gombnyomással visszakapcsolhat a mentett üzemmódra.

3.4 Stroboszkóp, lásd 8. ábra.

Stroboszkóp üzemmódra álláshoz nyomja meg gyorsan egymás után háromszor vagy háromnál többször a kapcsolót. Az üzemmódból való kilépéshez nyomja meg vagy tartsa nyomva a kapcsolót.

3.5 A fényerőfokozat megváltoztatása, lásd 9. ábra.

A bekapcsolt állapotban lévő lámpa a kapcsoló nyomva tartásakor automatikusan végigkapcsol az alacsony, közepes, erős és alacsony fokozatokon. A kívánt fokozat a gomb felengedésével választható ki (kérjük, ne feledje, hogy a holdfény és a turbó üzemmód nem szerepel az ilyen módon végigkapcsolható fokozatok között).

3.6 A fényerő fokozatmentes növelése és csökkentése

Lámpa kikapcsolva: Forgassa a kapcsolót az óramutató járásával megegyező irányba az adott körülmények között elérhető legmagasabb elmentett fényerőfokozatra (erős fokozat). A legmagasabb beállítási fokozat elérésékor villogni kezd a fényerőszabályzón az elért fokozat kijelzése. A kapcsoló óramutató járásával ellentétes irányba forgatásával egészen a holdfény üzemmód eléréséig csökkenthető a fényerőfokozat. A legalacsonyabb beállítási fokozat elérésékor a fényerőszabályzón villog a fokozat kijelzése. **Lásd 10-1. ábra.**

Lámpa bekapcsolva: Forgassa a kapcsolót az óramutató járásával megegyező irányba az adott körülmények között elérhető legmagasabb elmentett fényerőfokozatra (turbó üzemmód). A legmagasabb beállítási fokozat elérésékor villogni kezd a fényerőszabályzón az elért fokozat kijelzése. A kapcsoló óramutató járásával ellentétes irányba forgatásával egészen a holdfény üzemmód eléréséig csökkenthető a fényerőfokozat. A legalacsonyabb beállítási fokozat elérésékor a fényerőszabályzón villog a fokozat kijelzése. **Lásd 10-2. ábra.**

3.7 Időzítő, lásd 11. ábra.

A Seeker 4 Pro hosszú (9 perces) és rövid (3 perces) időzítő funkcióval van ellátva arra az esetre, ha a lámpa automatikus kikapcsolására van szükség. Bekapcsolt lámpa esetén az aktuális fényerőfokozat megtartása mellett a kapcsoló kétszeri nyomva tartásával lehet belépni az időzítő funkcióba. Egyszeri villanás a rövid, kétszeri villanás a hosszú időzítő funkcióba való belépést jelzi. A kikapcsolás késleltetési idejének leteltével a lámpa automatikusan kikapcsol.

4. A tok használatának módja, lásd 12. ábra.

Feloldás egyetlen lépésben: A tokból kivett lámpa automatikusan feloldásra kerül. A kapcsoló körül 5 másodpercre megjelenik az elmentett fényerőfokozat és az akkumulátor maradékkapacitásának kijelzése. A lámpa a kijelzések eltűnésétől számított 10 másodpercen belül egyszeri gombnyomással bekapcsolható.

Lezárás egyetlen lépésben: A kikapcsolt állapotban lévő lámpa a tokba helyezéskor lezárt állapotba kerül.

5. A rögzítő konzol használata, lásd 13. ábra.

Kezdje azzal, hogy szerszámokkal kilyukasztja a falat vagy a fatáblát,

majd helyezze be a tágító csavarokat. Ezután távolítsa el a 3M öntapadó matricát a rögzítőkonzol hátuljáról, és igazítsa a falon lévő furathoz. Végül rögzítse a konzolt a csavarok becsavarásával. (Megjegyzés: Kérjük, ragassza fel a 3M öntapadó matricát egy lapos és sima falra vagy autópanelre)

6. A függőleges tok kivételéhez a rögzítőkonzolból lásd a 14. ábrát.

Nyomja a függőleges tokot a rögzítőkonzolhoz, majd húzza felfelé és ki a rögzítőkonzolból.

7. A kapcsolón található kijelzések:

7.1 Fényerőfokozat kijelzések, lásd 15-1. ábra.

7.2 Akkuállapot kijelzések, lásd 15-2. ábra.

(RU) Русский

Многоязычный словарь, смотрите Table 3.

1. Параметры продукта приведены в таблицах 1 и 2.

2. Инструкция по эксплуатации указана ниже:

2.1 Перед использованием снимите изолирующую пленку, см. рисунок 1.

2.2 Зарядка, см. рисунок 2.

Во время зарядки индикаторы уровня заряда батареи на приборной панели будут динамически подсвечиваться. Как только он будет полностью заряжен, загорятся все индикаторы уровня заряда батареи.

2.3 Блокировка, см. рисунок 3.

После выключения он будет автоматически заблокирован, если в течение 10 секунд после выключения индикаторов не будет произведено никаких операций. В режиме блокировки при нажатии бокового переключателя отображается оставшийся уровень заряда батареи.

2.4 Разблокируйте, см. рисунок 4.

Чтобы разблокировать, поверните переключатель более чем на 90 градусов в любом направлении или нажмите и удерживайте кнопку около 1 секунды, пока фонарик не перейдет в режим лунного света. После разблокировки индикаторы яркости и уровня заряда батареи будут отображать соответственно сохраненный уровень яркости и оставшийся уровень заряда батареи.

3. Пока разблокирован:

3.1 Включите/выключите его, см. рисунок 5.

Нажмите на выключатель, чтобы включить / выключить его. При включении фонарь вернется к запомненному уровню яркости. (Высокий режим и выше уровень яркости будет запомнен как Высокий режим. Средний режим и выше уровень яркости после выключения будет автоматически сохранен как запомненный режим, а через одну минуту он будет занесен в память как средний режим. Уровень яркости ниже среднего будет автоматически сохранен как запомненный режим после выключения.

Table 3
Multi-language dictionary

EN	Moonlight	Low	Medium	High	Turbo	Strobe	Stepless dimming	Press	Double press	Press and hold	Triple press	Blink once	Blink twice
CN	月光档	低档	中档	高档	极亮档	爆闪	无极调光	单击	双击	长按	三击	闪烁一次	闪烁二次
FI	Moonlight-tila	Low-tila	Medium-tila	High-tila	Turbo-tila	Strobo	Portaaton himmennys	Napauta	Kaksoisnapauta	Paina ja pidä painettuna	Kolmoisnapauta	Vilkuta kerran	Vilkuta kaksi kertaa
NO	Moonlight modus	Lav modus	Medium modus	Høy modus	Turbo modus	Blink modus	Trinnløs dimming	Trykk	Trykk to ganger	Hold inne	Trykk tre ganger	Blink en gang	Blink to ganger
SV	Moonlight läge	Lågläge	Mellanläge	Högt läge	Turboläge	Blixt läge	Steglös dimring	Tryck	Dubbeltryck	Tryck och håll	Trippel Tryck	Blinka en gång	Blinka två gånger
NL	Maanlicht modus	Lage Modus	Gemiddelde Modus	Hoge Modus	Turbo Modus	Stroboscoop	Traploos dimmen	Druk	Dubbel drukken	Houd ingedrukt	Driemaal drukken	Knipper één keer	Knipper twee keer
PL	Tryb moonlight	Tryb niski	Tryb średni	Tryb wysoki	Tryb turbo	Strobe	Bezstopniowe przyciemnianie	Naciśnij	Naciśnij dwa razy	Naciśnij i przytrzymaj	Naciśnij trzy razy	Mruga raz	Mruga dwa razy
DE	Mondlichtmodus	Niedriger Modus	Mittlerer Modus	Hoher Modus	Turbo-Modus	Strobe	Stufenlose Helligkeitseinstellung	Drücken	Zweimal drücken	Gedrückt halten	Dreimal drücken	Blinkt einmal	Blinkt zweimal
HU	Holdfény mód	Alacsony mód	Közepes mód	Magas mód	Turbó mód	Stroboszkóp	Folyamatos tompítás	Megnyomás	Dupla megnyomás	Nyomva tartás	Tripla megnyomás	Egy pislogás	Két pislogás
RU	Режим мунлайт	Минимальный режим	Средний режим	Максимальный режим	Турбо режим	Режим стробоскоп	Плавное затемнение	Нажмите	Двойное нажатие	Нажмите и удерживайте	Тройное нажатие	Мигание один раз	Мигание два раза
ES	Modo de luz de luna	Modo de potencia baja	Modo de potencia media	Modo de potencia alta	Modo turbo	Estroboscópico	Atenuación continua	Presione	Presione dos veces	Mantenga presionado	Presione tres veces	Parpadee una vez	Parpadee dos veces
RO	Mod de veghe	Mod mic	Mod mediu	Mod mare	Mod turbo	Stroboscop	Diminuare continuă a intensității luminoase	Apăsare	Apăsare dublă	Apăsați și mențineți apăsat	Apăsare triplă	Clipește o dată	Clipește de două ori
UA	Режим Moonlight	Режим Low	Режим Medium	Режим High	Турбо-режим	Режим стробоскопа	Плавне затемнення	Прес	Подвійне натискання	Натисніть і утримуйте	Потрійне натискання	Один раз моргнути	Двічі моргнути
JP	ムーンライトモード	ローモード	メディアムモード	ハイモード	ターボモード	ストロボモード	無段階調光	プレス	ダブルプレス	押したまま	トリプルプレス	一度点滅	二度点滅
KR	문라이트 모드	로우 모드	미디엄 모드	하이 모드	터보 모드	스트로브	스텝리스 조도 감소	누르기	2번 누르기	길게 누르기	3번 누르기	1번 깜빡임	2번 깜빡임
TH	โหมดแสงจันทร์	โหมดความสว่างต่ำ	โหมดความสว่างปานกลาง	โหมดความสว่างสูง	โหมดเทอร์โบ	กระพริบ	หรี่แสงอย่างไร้รอยต่อ	กด	กดสองครั้ง	กดค้างไว้	กดสามครั้ง	กะพริบหนึ่งครั้ง	กะพริบสองครั้ง
FR	Mode Luciole	Mode Faible	Mode Moyen	Mode Haut	Mode Turbo	Stroboscope	Gradation continue	Appuyer	Double pression	Appuyer et maintenir	Triple pression	Clignote une fois	Clignote deux fois
IT	Modalità chiaro di luna	Modalità bassa	Modalità media	Modalità alta	Modalità Turbo	Strobo	Dimmerazione continua	Premere	Premere due volte	Premere e tenere premuto	Premere tre volte	Lampeggia una volta	Lampeggia due volte
SK	mesačny svit	slaby režim	stredný režim	vysoky režim	turbo režim	stroboskop	Súvislé tlmenie	Stlačenie	Dvojité stlačenie	Stlačenie a podržanie	Trojité stlačenie	Jedno žmurknutie	Dve žmurknutia
PT	Modo Luar	Modo baixo	Modo Médio	Modo alto	Modo turbo	Strobo	Escurecimento contínuo	Pressionar	Pressionar duas vezes	Manter pressionado	Pressionar três vezes	Piscar uma vez	Piscar duas vezes

WARRANTY

Within 30 days of purchase: Contact the original seller for repair or replacement.

Within 5 years of purchase: Contact Olight for repair or replacement.

Battery warranty: Olight offers a one-year warranty for all rechargeable batteries.

Holster: One year.

If you experience quality problems or damage with low-value fittings like lanyards or clips within 30 days of purchase under normal use conditions, please contact our after-sale service. For issues that occur after 30 days or for damage caused by abnormal use conditions, we provide a conditional quality assurance as appropriate.

USA Customer Support

cs@olightstore.com

Global Customer Support

contact@olightworld.com

Visit **www.olightworld.com** to see our complete product line of portable illumination tools.

OLIGHT

Dongguan Olight E-Commerce Technology Co., Ltd.

4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China.

Made in China

CAN ICES-005 (B) / NMB-005 (B)

3.4000.0619 A.06, 17, 2023